

Installing Fiber Brick Liners

Follow the instructions below to install fiber brick liners.

MODELS:

FLB450-VR Fiber Liner, Vintage Red, 3 piece set

FLB450-S Fiber Liner, Sandstone, 3 piece set

FLB450-SG Fiber Liner, Slate Gray, 3 piece set

For use with outdoor gas fireplace models BL450SS-G, BL450SS-L, DF450SS-G, DF450SS-L

KIT CONTENTS:

Please ensure that all these parts are in the packaging.

- Left Fiber Brick Liner
- Right Fiber Brick Liner
- Rear Fiber Brick Liner
- Instruction Sheet

TOOLS / SUPPLIES NEEDED:

- Safety Glasses
- Protective Work Gloves
- Phillips Head Screwdriver

GENERAL INFORMATION:

All of these parts may scratch and bend, great care should be used in handling them. If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation. All warnings and precautions in the operation and installation manual provided with the appliance apply to this instruction sheet. Check the contents of the kit upon receipt and check for any damaged or missing parts.

CAUTION: TURN OFF THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

INSTALLATION STEPS:

Step 1. Turn OFF gas to the fireplace. *Refer to the fireplace Installation and Operation instructions or the pullout lighting labels in the control compartment for more information.*

Step 2. Remove front frame assembly (Item 7). *Refer to the fireplace Installation and Operation instructions for more information.*

Step 3. Remove screen rod and screens (Items 8 & 9).

Step 4. Detach the left and right columns (Items 5 & 6) by removing the three Phillips head screws on each column.

Step 5. Slide the left stainless-steel liner (Item 2) out of the firebox first followed by the right stainless-steel liner (Item 4) and lastly the rear stainless-steel panel (Item 3).

Step 6. Remove the three (3) fiber brick liner panels from the packaging material. **NOTE:** Do not force the liners. Excessive force may cause breakage. If the liners are correctly positioned, they will fit snugly in place.

Step 7. Carefully position the rear brick liner, lower edge first, in the firebox against the rear wall.


IMPORTANT NOTE: Liners are fragile, so hold the rear liner in place with your hands until stabilized with side liner installation in Step 8.

Step 8. Carefully position the right-side brick liner in the firebox.

Step 9. While holding the rear liner, carefully position the left side brick liner in the firebox.

Step 10. Attach the left and right columns (Items 5 & 6) back in place using the Phillip head screws previously removed.

Step 11. Replace the screen rod and screens (Items 8 & 9) and secure the front frame assembly (Item 7).

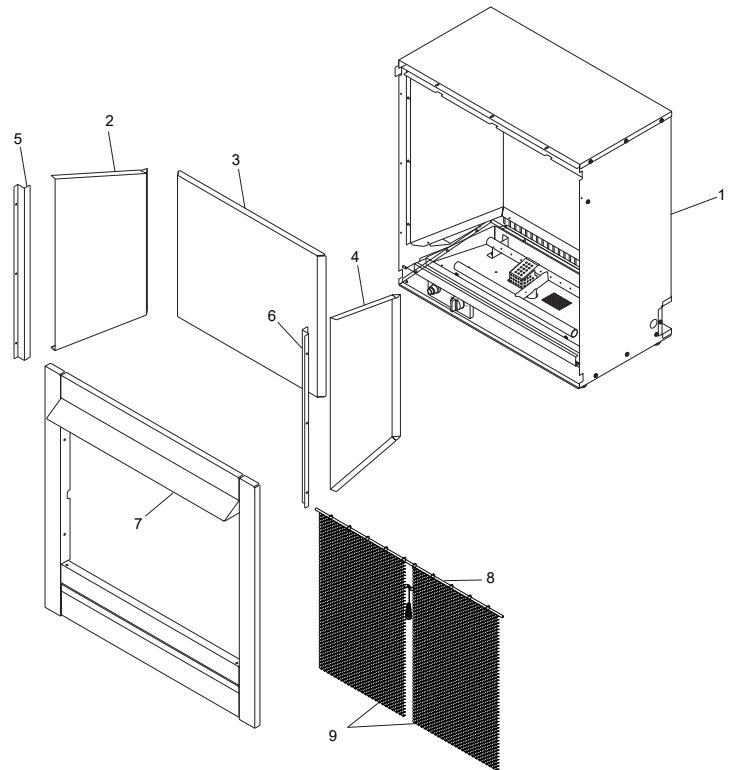

NOTE: Diagrams and Illustrations are not to scale.